



TP-A-0-J-**-**-A INSTALL

* indicates probe and lead length selection

READ THESE INSTRUCTIONS BEFORE YOU BEGIN INSTALLATION


INSTALLATION

The **iAIRE** temperature probe is both non-polarity and non-position sensitive. All thermistor type room units are supplied with a two-pole terminal block. It is recommended to use 18-20 AWG twisted pair wire or shielded cable for sensor installation.

MOUNTING

The wires for the temperature probe should land at the desired location (either the SAT or OAT location on your controller).

(Unit can mount in any position or angle)

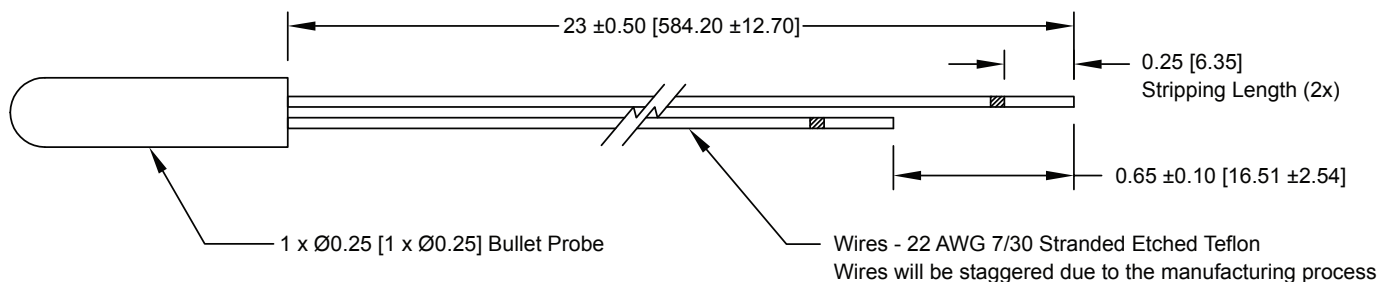

WIRING

⚠ (Be sure to follow all local and electrical codes. Turn off power to the unit before mounting or making any connections.)

