



TRN-0005 INSTALL

READ THESE INSTRUCTIONS BEFORE YOU BEGIN INSTALLATION


INSTALLATION

The **iAIRE** transformer allows for additional power when needed to run the ion generator. It is a class 2 transformer with circuit breaker.

MOUNTING

The transformer should be mounted to the mounting plate using self tapping metal screws [figure 1.1].

fig. 1.1 (transformer mounting)

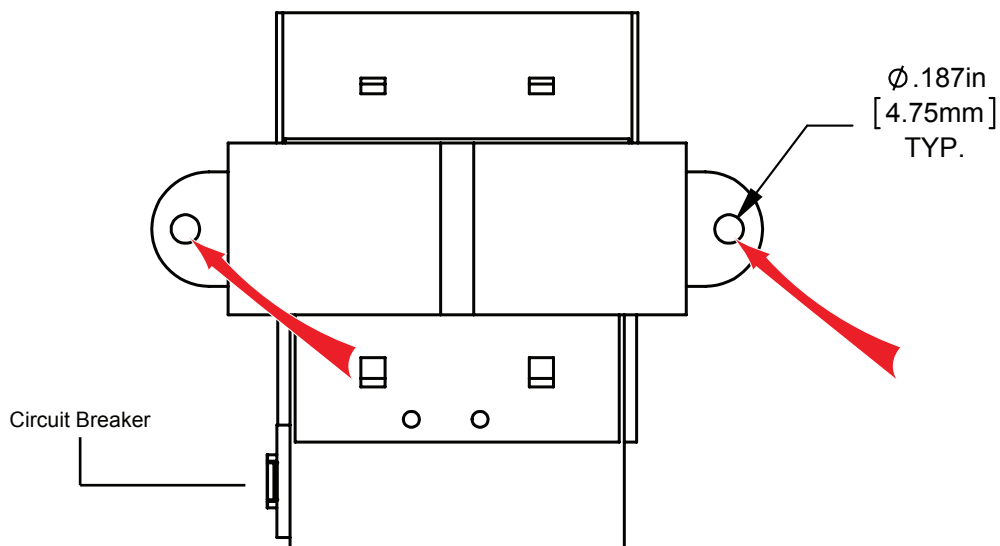

WIRING

⚠ (Be sure to follow all local and electrical codes. Turn off power to the unit before mounting or making any connections.)

- Check the label on the product and wire it only to the voltage range shown.

Output Voltage	75 VA (YEL) / 24VAC (BLU)				
PRI	COM	460	208	230	120
	WHT	GRY	RED	ORG	BLK

- All ion generators should be wired to the transformer.
- Run black and red wires from ion to the transformer in RTU to power ion air cleaners.
- Check to verify that transformer breaker is not tripped.

